

# SAM module removal

**This is the SAM module, it is also the fuse box for the Fortwo:**



**SAM Location: Left side, lower dash.**




**Pictured below is what you will see looking up from the driver side floorboard.**

**1) Disconnect the battery negative cable. The battery is found under the passenger floor board.**

**2) Remove any option fuse holders mounted at the “F” location. On the model pictured below, there are 3. Yours may have less or more.**

**3) Remove “1” and “2” screws. They are Torx #20 machine screws.**

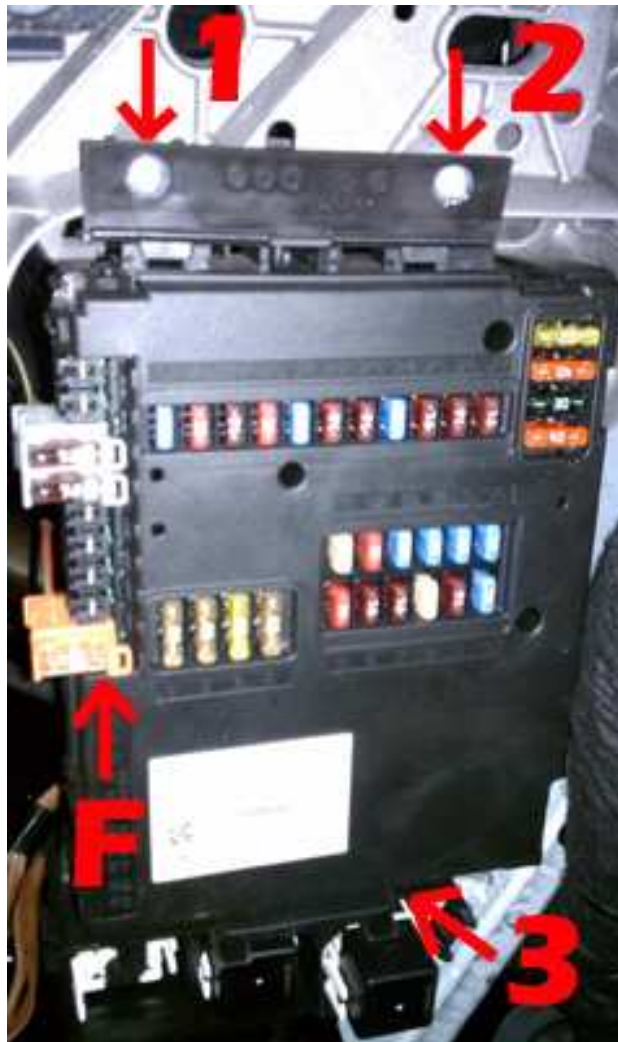

**4) Then with the screws removed from the rear of the SAM, the front edge will unclip from the relay board at the “3” location pictured above.**

**5) From the top side of the SAM unplug the 11 connectors and then unbolt the large red cable pictured below. You will find the nut under a red plastic cover. It is a 10mm nut.**



**6) It is now ready for shipment. Leave the battery disconnected until the SAM is completely reinstalled.**